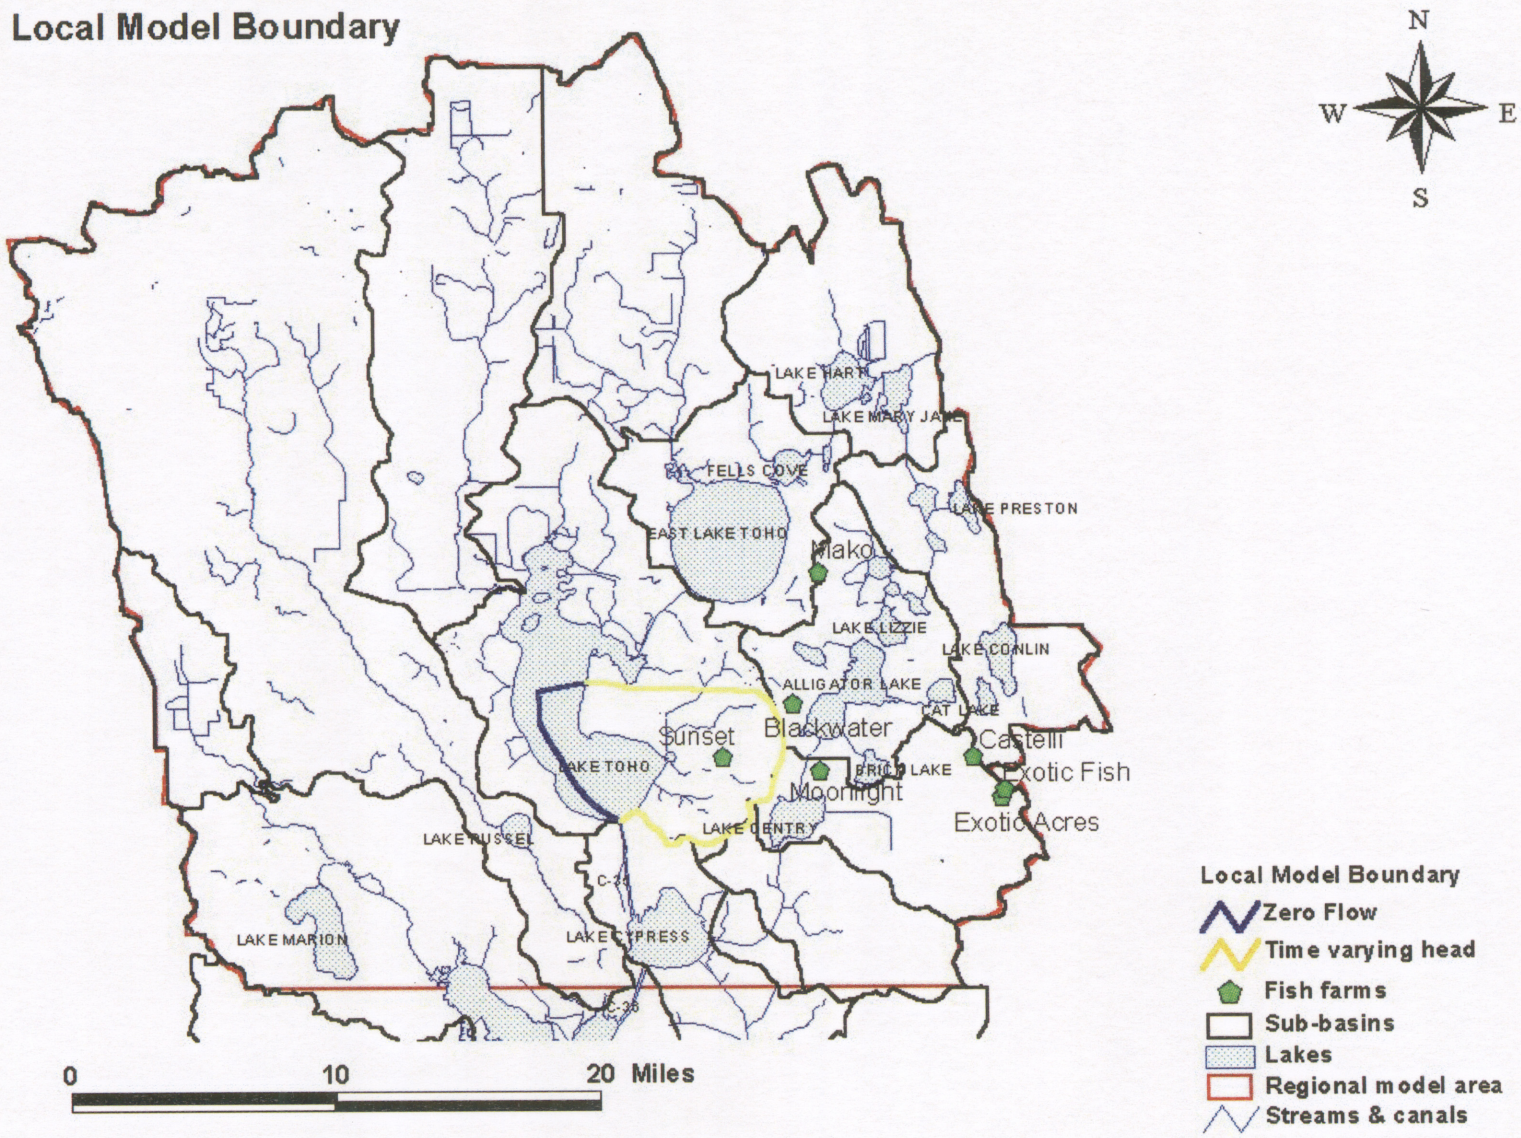


*Figure 3-16 Location of the Local Scale Model and Applied Boundary Condition Types*